

Fattori di efficacia melanopica dei LED

Per convertire quantificazioni fotopiche (visive) in dati melanopici (biologici) (conf. CIE S 026/E:2018, DIN SPEC 5031-100).

CRI	Temperatura di colore correlata*	Flusso luminoso apparecchio	MNER	MDER	MEER
>90	2700 K	4450 lm	1,03	0,48	0,53
	3000 K	4450 lm	1,04	0,55	0,61
	3500 K	4450 lm	1,04	0,65	0,71
	4000 K	4450 lm	1,02	0,72	0,79
	4500 K	4450 lm	1,00	0,78	0,86
	5000 K	4450 lm	0,98	0,83	0,92
	5700 K	4450 lm	0,97	0,89	0,99
	6500 K	4450 lm	0,95	0,95	1,05

CRI: Indice di resa cromatica superiore a

Temperatura di colore correlata*: Valori della temperatura di colore secondo ANSI

Flusso luminoso apparecchio: Flusso luminoso nominale apparecchi

MNER: Melanopic Natural Efficacy Ratio

≙ mv, mel, nat (fattore di conversione relativo all'illuminante di riferimento naturale, simile al calcolo della resa cromatica, a parità di temperatura di colore (CCT))

MDER: Melanopic Daylight Efficacy Ratio, CIE S 026/E:2018


≙ mv, mel, D65 (DIN SPEC 5031-100, fattore di conversione relativo all'illuminante D65, per calcolare l'illuminamento equivalente alla luce diurna melanopica)

MEER: Rapporto melanopico di pari energia, CIE S 026 / E: 2018

≙ R (equivalente Melanopic Lux metrico, rapporto melanopico) adatto per calcoli secondo WELL Building Standard v2 (L03)

Luce diurna/Planck: Il valore di riferimento naturale è luce diurna sopra i 5000K, spettro di Planck al di sotto.

MDER

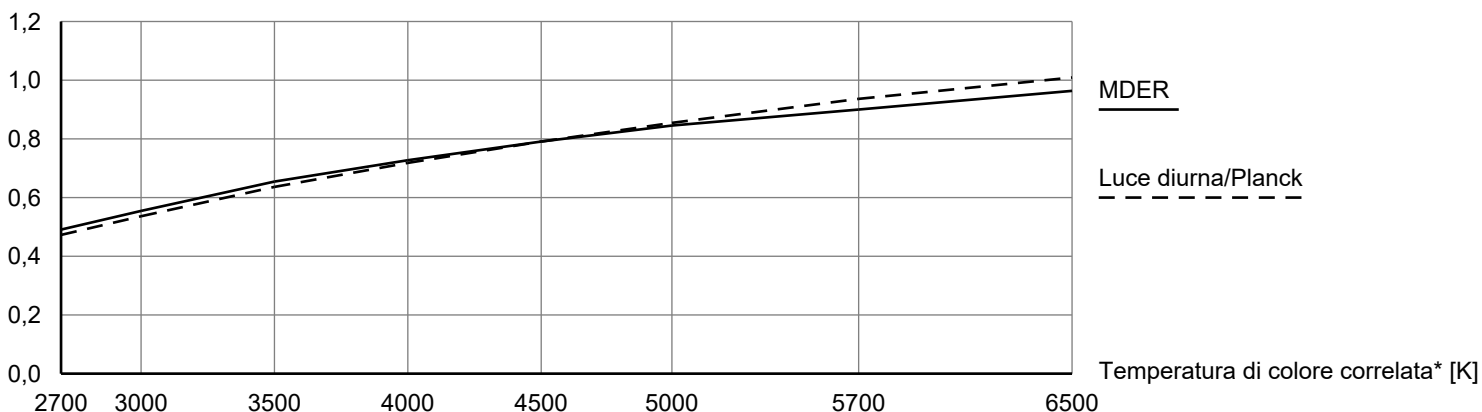

Nota per il progettista illuminotecnico:

Vedi allegato sul calcolo degli effetti di illuminazione melanopica. In alternativa rivolgersi ai nostri progettisti di soluzioni illuminotecniche.

Allegato: https://www.thornlighting.com/PDB/Teaser/EN/TLG_Melanopic-Datasheet-Supplement.pdf

THORN

Notes regarding the conversion of visual evaluation variables into biological evaluation variables

The conversion factors specified in the “Melanopic Data Sheet” can be used to convert the results of a photopic light calculation or measurement into melanopic evaluation variables.



Photopic (visual) evaluation



Melanopic (biological) evaluation

- 1 Reception area of the vertical illuminance at the eye of the observer, relevant for melanopic evaluation
- 2 Light from light source **photopically evaluated** with standard measuring and planning tools
- 3 Light from light source **melanopically evaluated** with formula (photopic value multiplied by factor from Zumtobel data sheet = melanopic value)

Notes regarding melanopic light planning

The specified “melanopic action factors” enable the light planner to perform calculations to determine biological effectiveness (in accordance with CIE S 026/E:2018, DIN SPEC 5031-100, DIN SPEC 67600 and [WELL Building Standard](#)). With regard to the aspects of “Human Centric Lighting” and “Human Centred Design”, these extended planning parameters are attributed increasing importance for optimised light quality and well-being.

The luminaire and its spectrum contribute to the biological effect, but a holistic approach is required: *Integrative, holistic planning includes the application and effects of light in the planning process from the outset and, amongst other things, helps to implement energy-efficient solutions for biologically effective light through suitable use of daylight.**

A holistic planning should take the following aspects into account: *, **, ***

- Luminous intensity (illuminance)
- Changes in the spectrum during transmission
- Changes in the spectrum during reflection
- Changes in the spectrum through absorption
- Area and room angle (geometric arrangement of the light)
- Light direction (geometric arrangement of the light)
- Daytime adapted light
- Season adapted light
- Duration of light exposure
- Spectral and spatial distribution of light over time
- Rapid light changes
- Luminous intensity (illuminance) at other times
- Correction factor for age with melanopic effects of light
- Correction factor for age-dependent reduction of transmission by the eyes
- Correction factor for age-dependent pupil constriction

Another source for planning all aspects of “Human Centric Lighting” is the [licht.wissen 21](#) Guide to Human Centric Lighting (HCL), available free of charge at licht.de.

*DIN SPEC 67600, **DIN SPEC 5031-100, ***No claim to completeness